



Precision Vacuum Planters

Twin-Row Stacker Bar Mounted



Operator & Parts Manual

Includes Instructions for:

- **Safety**
- **Operation**
- **Maintenance**

INTRODUCTION

Congratulations on your purchase of a MONOSEM planter.

This manual has been prepared for use in operation, adjustment, and maintenance of the planter. Read this manual carefully before operating your planter.

The information used in compiling this manual is current, however as production changes do occur on a continual basis, Monosem Inc. reserves the right to change specifications or designs without notice and without the obligation to install the same on previously manufactured machines.


Please take the time now to record your serial number and date of purchase for a reference when ordering replacement parts for your Monosem NG Plus 4 planter.

Serial Number _____

Date _____

The WARRANTY for your NG Plus 4 planter is printed on the back cover.



While reading your manual you will see the symbol  and the words **CAUTION, WARNING, DANGER**. Pay particular attention to the safety information given. Failure to observe the safety symbols can cause damage to the machine and/or personal injury. A detailed description of the safety symbols and their meaning is found in the safety section of this manual.

2 precautions for successful planting:

1. Choose a reasonable working speed adapted to the field conditions and desired accuracy.
2. Check proper working of the seed metering, seed placement, spacing and density when starting up and from time to time during planting.

... and don't forget – accurate planting is the key to a good stand!

QUICK REFERENCE

STACKER BAR Twin-Row PLANTER

SAFETY	1
GENERAL SAFETY	1. 1
BEFORE OPERATION	1. 1
DURING & FOLOWING OPERATION	1. 2
UNHOOKING THE PLANTER	1. 2
STORING THE PLANTER	1. 2
PERFORMING MAINTENANCE	1. 3
TIRE SAFETY	1. 3
DRIVE LINE SAFETY	1. 3
HYDRAULIC SAFETY	1. 3
SAFETY STICKERS	1. 4

PREPARING THE PLANTER	2
LUBRICATION	2. 1
CHAIN TENSION ADJUSTMENT	2. 2
TIRE PRESSURE	2. 2
VALVE BLOCK INSPECTION	2. 2
TRACTOR HOOKUP	2. 3
LEVELING THE PLANTER	2. 4
TRANSPORTING THE PLANTER	2. 4
OPERATING SPEED	2. 4
FIELD TEST	2. 4
CHECKING SEED POPULATION	2. 5
UNHOOKING THE PLANTER	2. 5
STORING THE PLANTER	2. 5

FRAME	3
7 X 7 STACKER BAR OPERATION	3.1
PART NO. DESCRIPTIONS	3. 3
8-ROW 38" - 40" ASSEMBLY	3. 4
12-ROW 30" ASSEMBLY	3. 5
12-ROW 36" ASSEMBLY	3. 6
12-ROW 38" - 40" ASSEMBLY	3. 7
16-ROW 30" ASSEMBLY	3. 8
WHEEL BLOCK, REAR MOUNTED	3. 9
WHEEL BLOCK, FRONT MOUNTED	3. 11
HITCH ASSEMBLY	3. 13
LIFT ASSIST WHEEL	3. 15
SEQUENCING VALVE CONNECTION	3. 16

TRANSMISSION	4
PLANTING RATE CHART	4.1
ASSEMBLY - SINGLE PLATE TRANS.	4.2
ASSEMBLY & ADJ. TRANSMISSION	4.2
SEED POPULATION CHART	4.3

DRIVE	5
STANDARD TURBOFAN	5.1
ASSEMBLY-STANDARD TURBOFAN	5.2
ASSY - HIGH OUTPUT TURBOFAN	5.4-5.5
ASSY - EXTRA HIGH OUTPUT	5.6-5.7
ASSEMBLY - HYDRAULIC DRIVE	5.8-5.9
VACUUM GAUGE SETTINGS	5.10
ASSEMBLY - VACUUM GAUGE	5.10

ROW UNIT	6
SEED DEPTH	6.1
V PRESS WHEELS	6.1
DEPTH GAUGE WHEELS	6.2
DOUBLE DISC OPENERS	6.2
STABILIZER SPRINGS	6.2
DRIVE CHAIN	6.2
SEED HOPPER	6.2
SEED METERING SYSTEM	6.3
EXTRA LARGE SEED	6.4
DISENGAGING THE METER BOX	6.4
SEED TUBE	6.4
METERING BOX ADJUSTMENT	6.5
SEED DISC	6.5
SEED CHUTE	6.5
SEED DISC IDENTIFICATION	6.6
SEED DISC RECOMMENDATIONS	6.6
ASSEMBLY - ROW UNIT	6.8
ASSEMBLY-CLOSING WHEEL	6.10
ASSEMBLY-GAUGE WHEEL ARM	6.10
ASSEMBLY-GAUGE WHEEL	6.11
ASSEMBLY-METERING BOX	6.12
METERING BOX TROUBLESHOOTING	6.13
ASSY-UP/ DOWN PRESSURE SPRING	6.14
ASSY-7.5" HILLER DISC- FLAT PRESS	6.16
ASSY -7.5" HILLER DISC- V PRESS	6.17
ASSEMBLY- OFFSET 7.5"	6.18
ASSEMBLY-OFFSET 9"	6.19
ASSY-7.5" V PRESS CLOSING WHEEL	6.20
ASSY-7.5" FLAT PRESS WHEEL CLOSING	6.21
ASSEMBLY- TWIN-ROW HOPPER	6.22

OPTIONAL EQUIPMENT	7
ROW MARKERS	7.1
AIR INSECTICIDE SYSTEM	7.2
US GRANULAR INSECTICIDE SYSTEM	7.3
MICROSEM MICROGRANULAR SYSTEM	7.4
LIQUID FERTILIZER	7.7
GULL WING KIT FOR STACKER BAR	7.8

SPECIFICATIONS

3 pt Mounted 7"x 7" TWIN-ROW STACKER BAR

FRAME - Stacking Toolbar 7" x 7"

PLANTING UNIT – NG Plus 4 Monosem

Vacuum Metering Box
Double Disc Opener
Depth Gauge Wheels
Adjustable Closing Wheels

STANDARD ROW SPACING	TRANSPORT WIDTH	WEIGHT*
8x2 Twin-Row 36" 40"	12' 7"	7,000 lbs.
12x2 Twin-Row 38" 40"	19' 8"	11,500 lbs.

* The base machine weights include planter frame, optional row markers, drive components, tires and wheels, hydraulic cylinders and NG Plus 4 row units with seed hopper and lid.

DRIVE SYSTEM

Ground Drive
Four Heavy Duty Adjustable Drive Wheels with 7.60x15 tires

TRANSMISSION

Three Transmissions

MARKERS

Rear Folding Marker

TURBOFAN

450 rpm with Hydraulic Drive
500 High Output with Hydraulic Drive
500 Extra High Output with Hydraulic Drive

OPTIONAL EQUIPMENT

Hydraulic Drive (GPS Compatible)
Electronic Seed Monitor
Microsem Insecticide System
Disc Hiller System, with Flat or V Press Wheel
Lift Assist Wheels
U.S. Insecticide
U.S. Insecticide/Herbicide
No-Till & Minimum Till Attachments