



Precision Vacuum Planters

---

## Stacker Bar Mounted

---



Operator & Parts Manual

---

**Includes Instructions for:**

- **Safety**
- **Operation**
- **Maintenance**

## INTRODUCTION

---

### *Congratulations on your purchase of a MONOSEM planter.*

This manual has been prepared for use in operation, adjustment, and maintenance of the planter. Read this manual carefully before operating your planter.

The information used in compiling this manual is current, however as production changes do occur on a continual basis, Monosem Inc. reserves the right to change specifications or designs without notice and without the obligation to install the same on previously manufactured machines.


Please take the time now to record your serial number and date of purchase for a reference when ordering replacement parts for your Monosem NG Plus 4 planter.

Serial Number \_\_\_\_\_

Date \_\_\_\_\_

The WARRANTY for your NG Plus 4 planter is printed on the back cover.



While reading your manual you will see the symbol  and the words **CAUTION, WARNING, DANGER**. Pay particular attention to the safety information given. Failure to observe the safety symbols can cause damage to the machine and/or personal injury. A detailed description of the safety symbols and their meaning is found in the safety section of this manual.

#### ***2 precautions for successful planting:***

1. Choose a reasonable working speed adapted to the field conditions and desired accuracy.
2. Check proper working of the seed metering, seed placement, spacing and density when starting up and from time to time during planting.

*... and don't forget – accurate planting is the key to a good stand!*

**QUICK REFERENCE**

---

**STACKER BAR 3pt Mounted**

<b>SAFETY</b>	<b>1</b>	<b>DRIVE</b>	<b>5</b>
GENERAL SAFETY	1. 1	STANDARD TURBOFAN	5.1
BEFORE OPERATION	1. 1	ASSEMBLY-STANDARD TURBOFAN	5.2
DURING & FOLOWING OPERATION	1. 2	ASSY - HIGH OUTPUT TURBOFAN	5.4-5.5
UNHOOKING THE PLANTER	1. 2	ASSY - EXTRA HIGH OUTPUT	5.6-5.7
STORING THE PLANTER	1. 2	ASSEMBLY - HYDRAULIC DRIVE	5.8-5.9
PERFORMING MAINTENANCE	1. 3	VACUUM GAUGE SETTINGS	5.10
TIRE SAFETY	1. 3	ASSEMBLY - VACUUM GAUGE	5.10
DRIVE LINE SAFETY	1. 3		
HYDRAULIC SAFETY	1. 3	<b>ROW UNIT</b>	<b>6</b>
SAFETY STICKERS	1. 4	SEED DEPTH	6.1
		V PRESS WHEELS	6.1
<b>PREPARING THE PLANTER</b>	<b>2</b>	DEPTH GAUGE WHEELS	6.2
LUBRICATION	2. 1	DOUBLE DISC OPENERS	6.2
CHAIN TENSION ADJUSTMENT	2. 2	STABILIZER SPRINGS	6.2
TIRE PRESSURE	2. 2	DRIVE CHAIN	6.2
VALVE BLOCK INSPECTION	2. 2	SEED HOPPER	6.2
TRACTOR HOOKUP	2. 3	SEED METERING SYSTEM	6.3
LEVELING THE PLANTER	2. 4	EXTRA LARGE SEED	6.4
TRANSPORTING THE PLANTER	2. 4	DISENGAGING THE METER BOX	6.4
OPERATING SPEED	2. 4	SEED TUBE	6.4
FIELD TEST	2. 4	METERING BOX ADJUSTMENT	6.5
CHECKING SEED POPULATION	2. 5	SEED DISC	6.5
UNHOOKING THE PLANTER	2. 5	SEED CHUTE	6.5
STORING THE PLANTER	2. 5	SEED DISC IDENTIFICATION	6.6
		SEED DISC RECOMMENDATIONS	6.6
<b>FRAME</b>	<b>3</b>	ASSEMBLY - ROW UNIT	6.8
7 X 7 STACKER BAR OPERATION	3.1	ASSEMBLY-CLOSING WHEEL	6.10
PART NO. DESCRIPTIONS	3. 3	ASSEMBLY-GAUGE WHEEL ARM	6.10
8-ROW 38" - 40" ASSEMBLY	3. 4	ASSEMBLY-GAUGE WHEEL	6.11
12-ROW 30" ASSEMBLY	3. 5	ASSEMBLY-METERING BOX	6.12
12-ROW 36" ASSEMBLY	3. 6	METERING BOX TROUBLESHOOTING	6.13
12-ROW 38" - 40" ASSEMBLY	3. 7	ASSY-UP/ DOWN PRESSURE SPRING	6.14
16-ROW 30" ASSEMBLY	3. 8	ASSEMBLY - HILLER DISCS	6.16
WHEEL BLOCK, REAR MOUNTED	3. 9	ASSEMBLY - CONCAVE PRESS WHEEL	6.18
WHEEL BLOCK, FRONT MOUNTED	3. 11	CONCAVE PRESS WHEEL/ HILLER ASSY	6.18
HITCH ASSEMBLY	3. 13		
LIFT ASSIST WHEEL	3. 15	<b>OPTIONAL EQUIPMENT</b>	<b>7</b>
SEQUENCING VALVE CONNECTION	3. 16	<b>ROW MARKERS</b>	<b>7.1</b>
		<b>AIR INSECTICIDE SYSTEM</b>	<b>7.2</b>
<b>TRANSMISSION</b>	<b>4</b>	<b>US GRANULAR INSECTICIDE SYSTEM</b>	<b>7.3</b>
PLANTING RATE CHART	4.1	<b>MICROSEM MICROGRANULAR SYSTEM</b>	<b>7.4</b>
ASSEMBLY - SINGLE PLATE TRANS.	4.2	<b>LIQUID FERTILIZER</b>	<b>7.7</b>
ASSEMBLY & ADJ. TRANSMISSION	4.2	<b>GULL WING KIT FOR STACKER BAR</b>	<b>7.8</b>
SEED POPULATION CHART	4.3		

## SPECIFICATIONS

---

### 3pt Mounted 7"x 7" STACKER BAR

**FRAME** - Stacking Toolbar 7"x 7"

#### PLANTING UNIT – NG Plus 4 Monosem

Vacuum Metering Box  
Double Disc Opener  
Depth Gauge Wheels  
Adjustable Closing Wheels

STANDARD ROW SPACING	WIDTH	WEIGHT*
8 Row 30" -----	20'	6125 lbs.
8 Row 36-40" -----	25' 1"	6155 lbs.
12-Row 22-24" -----	25' 1"	6915 lbs.
12-Row 30" -----	29' 10"	7610 lbs.
12-Row 38-40" -----	38' 10"	8287 lbs.
16-Row 30" -----	38' 10"	9047 lbs.

\* The base machine weights include planter frame, optional row markers, drive components, tires and wheels, hydraulic cylinders and NG Plus 4 row units with seed hopper and lid.

#### DRIVE SYSTEM

Ground Drive  
Four Heavy Duty Adjustable Drive Wheels  
with 7.60x15 tires

#### TRANSMISSION

Three Transmissions

#### MARKERS

Rear Folding Marker

#### TURBOFAN

450 rpm with Hydraulic Drive  
500 High Output with Hydraulic Drive  
500 Extra High Output with Hydraulic Drive

#### OPTIONAL EQUIPMENT

Hydraulic Drive (GPS Compatible)  
Electronic Seed Monitor  
Microsem Insecticide System  
Disc Hiller System, with Flat or V Press Wheel  
Lift Assist Wheels  
U.S. Insecticide  
U.S. Insecticide/Herbicide  
No-Till & Minimum Till Attachments