

TABLE OF CONTENTS

7. OPTIONAL EQ.

**7. 0. MISC.
NO-TILL COULTER
CLOD REMOVERS
RESIDUE MANAGER
NO-TILL LINKAGE**

7. 1. ROW MARKERS

•

7. 3. GRANULAR INSECTICIDE

7. 4. MICROSEM INSECTICIDE

•


7. 7. LIQUID FERTILIZER

OPTIONAL EQUIPMENT

NO TILL COULTER

Unit Mounted

YL-527

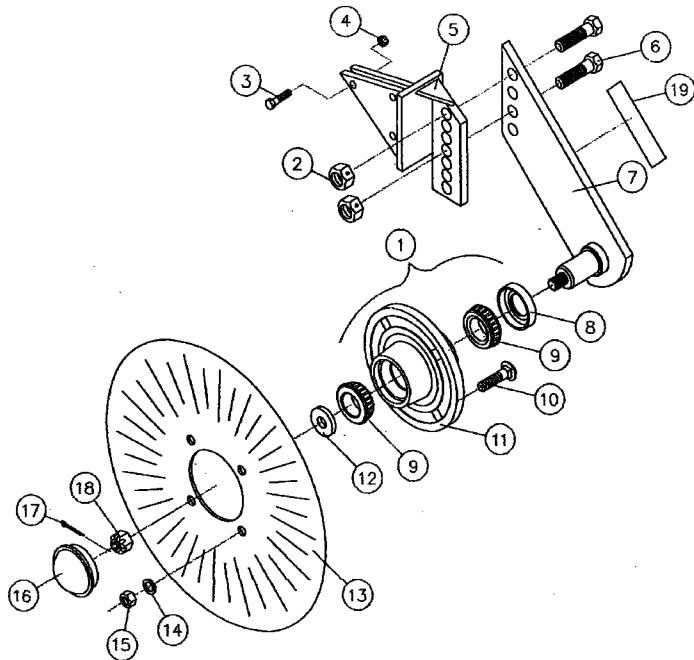


ITEM PART #	DESCRIPTION
1 Y2900-102	Hub Sub Assembly
2 Y2520-459	Lock Hex Nut 5/8 - 11
3 H-3130	Hex Head Bolt, 3/8 -16 x 1 3/4 GRD 8
4 N-2300	Lock Nut 3/8 - 16
5 L527-101	Unit Mount Bracket
6 H-5130	Hex Head Bolt, 5/8 -11 x 1 3/4 GR 8
7 L527-100	Coulter Arm
8 Y2550-115	Seal
9 Y2550-027	Cone, LM67048
10 Y2505-339	Carriage Head Bolt, 1/2 -13 GR 5
11 Y2900-105	Hub Pressed Assembly
12 Y2526-449	5/8 Flatwasher, 1/4 Thick
13 Y2571-166	25 Flute Blade, .157 x 14.56"
14 W-4610	Lock Washer, 1/2"
15 N-4001	Hex Nut, 1/2 - 13
16 Y2570-375	Hub Cap
17 Y2531-102	Cotter Pin, 1/8 x 1 1/4
18 Y2502-469	Castle Hex Nut, 5/8 - 18
19 Y2565-162	Decal

SPACERS

Front and Rear Spacers are used to hang accessories from a 2" x 2" diamond toolbar. The spacers are mounted on the 5" x 5" main frame toolbar.


PART No.	DESCRIPTION
900034.2	Front spacer, 2" x 2" Diamond bar for 7 x 7 planter.
900033.1	Rear spacer, 2" x 2" Diamond bar for 7 x 7 planter.

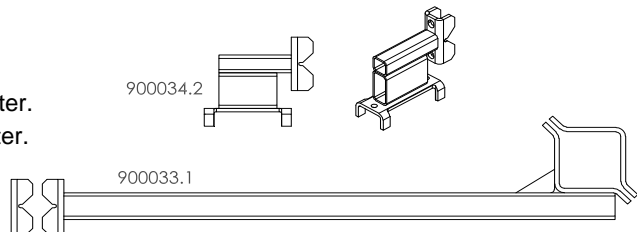

CLOD REMOVERS

The function of the clod remover is to clear the surface of the soil, but not plow a furrow. It is rigid and mounted in front of the disc openers that push clods away in preparation for the seed trench. The front brace of the clod remover is an independent adjustable opening knife that used to slice open hard soil and move stones away from the track of the disc opener. The clod remover should be adjusted according to soil type.


PART No.	DESCRIPTION
7101	Front point, clod remover
7102a	Mounting bracket, clod remover
7103a	Clod remover
HM-41035	Bolt , 10x35mm
HM-61230	Bolt , 12x30mm
NM-21015	Nylock 10mm
65034059	Clod remover brkt. Pin NG+4
66005863	Clod remover Mtg. brkt. NG+4
66005252	Clod remover adj. brace. NG+4
650996	Complete clod remover

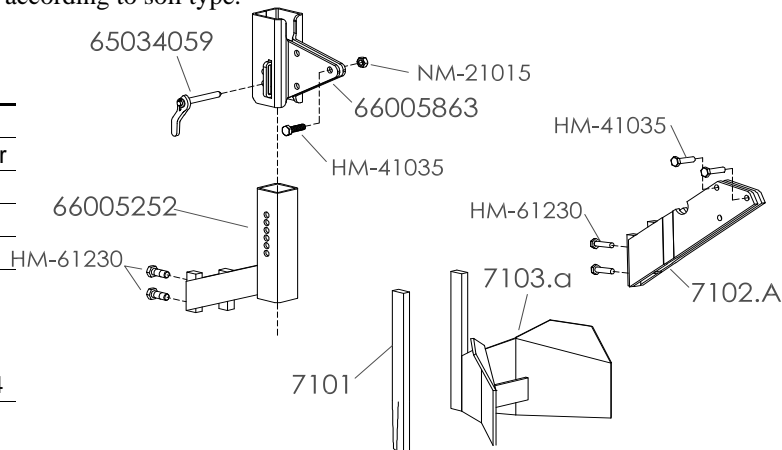

OPTIONAL EQUIPMENT



RESIDUE MANAGER

Residue managers are available for minimum and no-till situations.

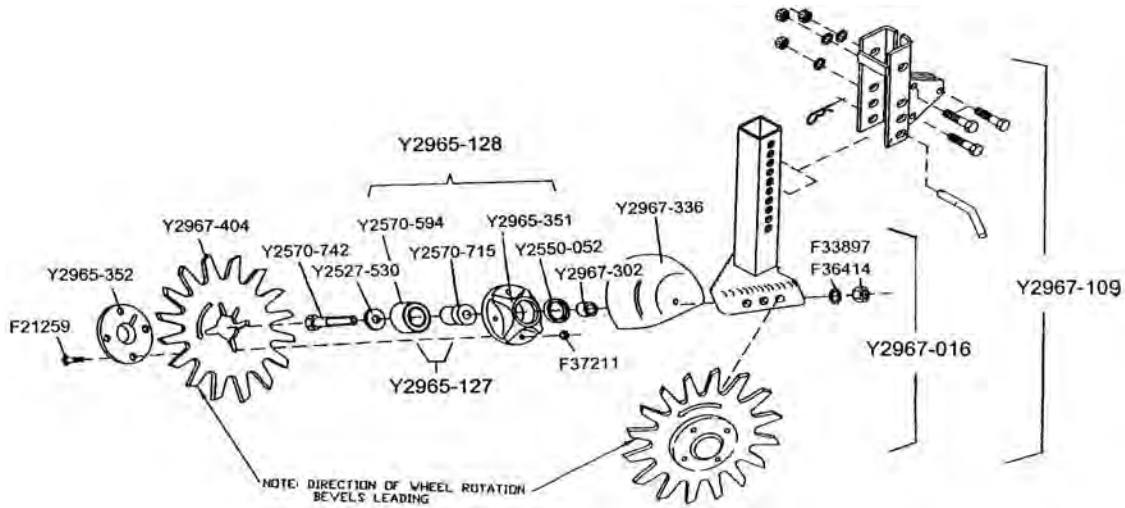

PART No.	DESCRIPTION
Y2967-109	Residue manager assy complete w/ mnt bracket

H-3130	Bolt, 3/8 -16 x 1 3/4 Gr. 5
H-4120	Bolt, 1/2- 13 x 1 1/2 Gr. 5
H-4320	Bolt, 1/2- 13 x 3 1/2 Gr. 5
CB-1150	Carriage bolt, 5/16 -18 x 1 1/2 Gr. 5
W-4210	Flat washer, 1/2
W-2610	Lockwasher, 3/8
W-5610	Lockwasher, 5/8"
N-2001	Nut 3/8- 16
N-5001	Nut, 5/8- 11
N-1101	Rev lock nut, 5/16- 18
N-4101	Rev lock nut, 1/2- 13
Y2526-402	Machine bushing, 9/16 ID x 1 3/4 OD x 1 1/4
Y2527-530	Machine bushing, 3/16"
Y2550-052	Seal for hub and bearing
Y2570-448	Hairpin, 1/8"
Y2967-404	Spoke wheel, 13" dia
Y2570-594	Bearing
Y2570-715	Insert for bearing
Y2570-742	D bolt, 5/8- 11 x 4" Gr. 5
Y2965-127	Bearing and insert assy
Y2965-128	Hub and bearing assy
Y2965-305	Pin
Y2965-351	Hub
Y2965-352	Hub cap
Y2967-016	Residue manager assu less mounting bracket
Y2967-200	Stem
Y2967-211	Mounting bracket for No-till parallel linkage
Y2967-245	Mounting bracket only
Y2967-302	Spacer, 3/4"
Y2967-336	Bearing shield

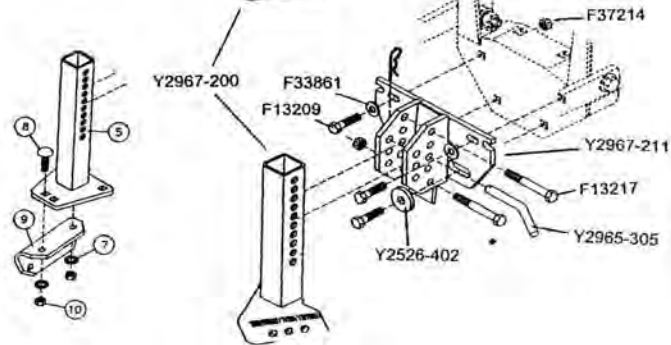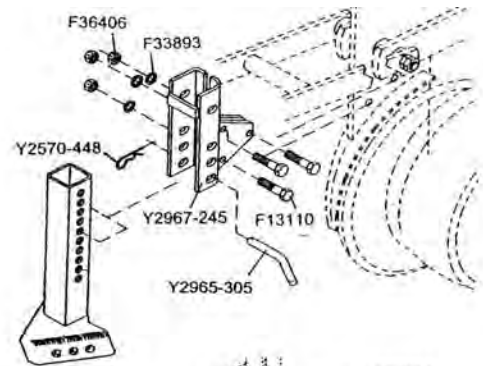


PART No.	DESCRIPTION
5	Y2967-234 Single Wheel Arm WA
7	Y2525-352 1/2 Medium Lockwasher ZP
8	Y2505-339 1/2- 13 x 1 1/2 Car. Clt GR 5 ZP
9	Y2967-405 Wheel Mount
10	Y2520-352 1/2- 13 Hex nut ZP

OPTIONAL EQUIPMENT

7" X 7" No Till Linkage

ASSEMBLY

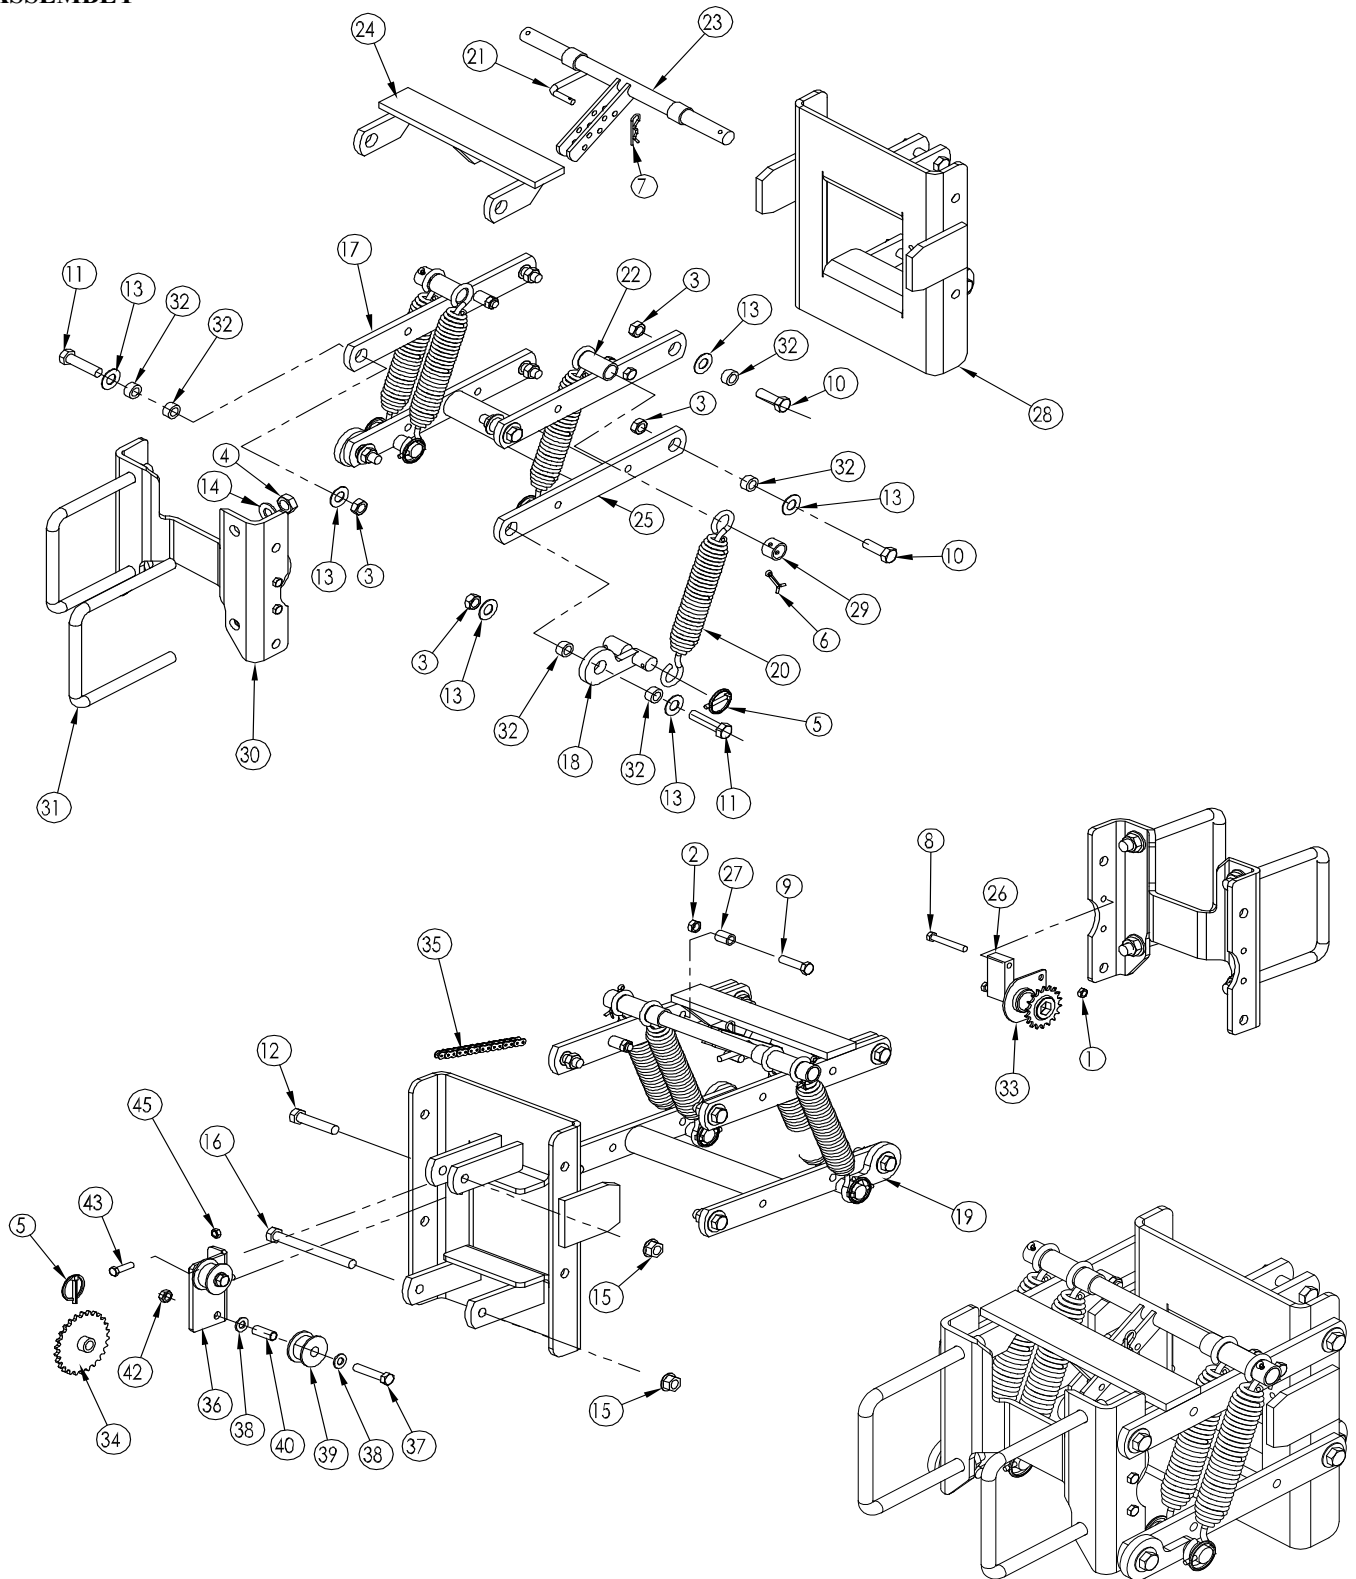

OPTIONAL EQUIPMENT

7" X 7" No Till Linkage

ASSEMBLY

ITEM	PART No.	DESCRIPTION
1	N-2100	3/8-16 Nylock nut Gr 5
2	N-4101	1/2-13 Nylock nut Gr 8
3	N-5101	5/8-11 Nylock nut Gr 8
4	N-6101	3/4-10 Nylock nut Gr 8
5	6077	Lynch pin, 1/4 x 1 1/4
6	F65147	Cotter pin, 1/4 x 2
7	7091	Hairpin, 1/8
8	H-3230	Hex bolt, 3/8-16 x 2 3/4 Gr 8
9	H-4220	Hex bolt, 1/2-13 x 2-1/2 Gr 8
10	H-5201	Hex bolt, 5/8-11 x 2 Gr 8
11	H-5301	Hex bolt, 5/8-11 x 3 Gr 8
12	H-5301	Hex bolt, 5/8-11 x 3 Gr 8
13	W-5210	Flat washer 5/8 Gr 8
14	W-6210	Flat washer 3/4 Gr 8
15	N-5401	Nut, flange head 5/8-11
16	H-5651	Hex bolt, 5/8-11 x 6 1/2 Gr 8
17	907097	Upper Parallel arm
18	L124591	Spring anchor LH
19	L124592	Spring anchor RH
20	L124630	Spring w/swivel hooks
21	L124643	Pin, spring adjustment
22	L124645	Spacer
23	907067	Spring bar
24	907130	Front bar
25	907098	Lower parallel arm
26	906972	Spacer block for sprocket
27	L124709	Spacer bushing
28	907064	Baseplate for unit mount
29	L125007	Bushing with hole for cotter pin
30	906967	Mounting plate, to toolbar
31	4502.SA	U-bolt, 7 x 7 x 3/4
32	L71505214	Bushing 5/8" ID x 1" OD x 37/64" wide
33	KA1720	Bearing sprocket
34	7110.S	Sprocket, 27 tooth #41 chain
35	900259	Chain, #41 x 124 links
36	800310	Roller bracket
37	H-4220	Hex bolt, 1/2-13 x 2 1/2 Gr 8
38	W-4410	Flat washer, 1/2
39	KD0916	Chain roller
40	E7523.1	Bushing, 13 ID x 16 OD x 38mm
42	N-4301	Reversible lock nut, 1/2-13
43	H-3104	Hex bolt, 3/8-16 x 1 1/4
45	N-2101	3/8-16 Nylock nut Gr 8
L124846		Linkage and spring kit (less sprocket, chain and rollers)
800310.ASY		Idler assembly (items 36 - 45)

ROW MARKERS

7" x 7" Toolbar Frame

ROW MARKER ADJUSTMENTS

The row marker length is determined by multiplying the number of rows by the row spacing (in inches). This figure should be equal to the distance from the end of the marker blade to the center line of the planter. Both the planter and the marker assembly should be lowered to the ground when measurements are taken. The measurement should be taken from the point where the blade contacts the ground. Adjust the left and right row markers equally to the determined length and securely tighten the clamping bolts.

Example:

of Rows x Row Spacing (inches) = Dimension
between Planter Center line and
Marker Disc Blade.

6 rows x 30" row spacing = 180".

Row marker extension from center of planter to end of row marker blade should be 180".



WARNING To avoid injury, stand clear and keep others away when raising or lowering markers. Lock row markers for transport using the locking sleeve or locking pin.



WARNING Use extreme care when operating the row markers near electrical lines.



WARNING
Hydraulic fluid escaping under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines. Tighten connections before applying pressure. If injured by escaping hydraulic fluid see a doctor at once. Gangrene can result. Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.



MARKER SPEED ADJUSTMENT

Markers come standard with automatic sequence valves. A flow control valve controls the lowering and raising speed of the markers. To slow the marker travel speed, loosen the jam nut and turn the control clockwise, or in. Turn the control counterclockwise, or out, to increase the travel speed. The adjusting bolt determines the amount of oil flow restriction through the flow control valve, therefore determining travel speed of the markers.





DANGER: Properly adjust the flow controls before the marker assembly is first put into use. Excessive travel speed of the markers can be dangerous and/ or damage the marker assembly.

NOTE: When oil is cold, hydraulics operate slowly. Make sure all adjustments are made with warm oil.

NOTE: On a tractor where the oil flow can not be controlled, the rate of flow of oil from the tractor may be greater than the rate at which the marker cylinder can accept it. The tractor hydraulic control lever will have to be held until the cylinder reaches the end of its stroke. This occurs most often on tractors with an open center hydraulic system.

On tractors with a closed center hydraulic system, the tractor's hydraulic flow control can be set so the tractor's detent will function properly.

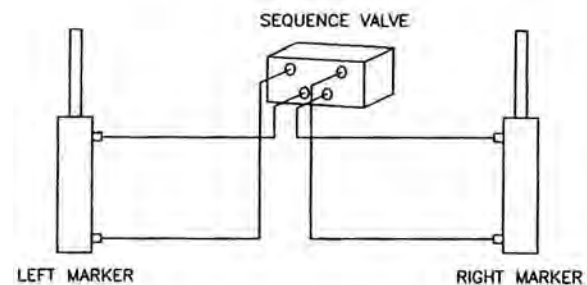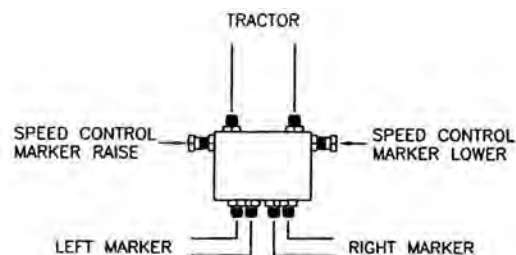


Single central marker sequence valve

ROW MARKERS

7" x 7" Toolbar Frame

MARKER SEQUENCING, FLOW CONTROL VALVE

Valve Block Assembly Inspection

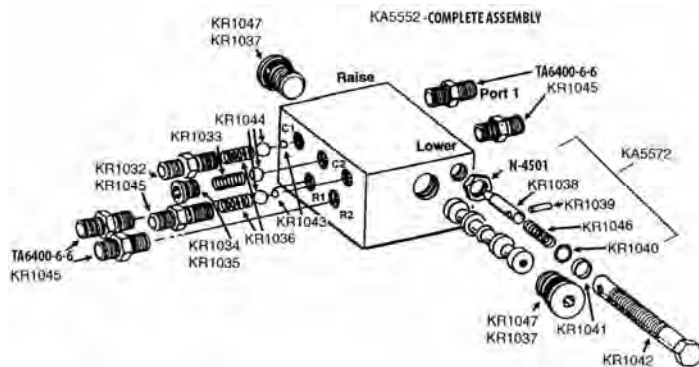

PART No.	DESCRIPTION
KA5552	Valve assembly complete
KA5572	Flow control portion only
H-3100	Hex Bolt, 3/8" -16x 1"
W-2410	Washer, 3/8" SAE
W-2610	Lock washer 3/8"
TA6400-6-6 (or TA6400-6-8)	3/8" Male JIC- 3/8" Male O-ring 3/8" Male JIC- 1/2" Male O-ring
KR1032	Port adaptor with O-ring
KR1033	Detent spring
KR1034	Hex socket O-ring plug w/ O-ring
KR1035	O-ring
KR1036	Spring
KR1037	O-ring
KR1038	Needle
KR1039	Spring pin
KR1040	O-ring
KR1041	Teflon BU ring
KR1042	Adjustment screw
KR1043	1/4" steel ball
KR1044	7/16" check ball
KR1045	O-ring
KR1046	Compression spring
KR1047	Hex socket plug with O-ring
N-4501	Hex jam nut, 1/2" -20

The valve block assembly consists of the marker sequencing and flow control valves in one assembly. The sequencing valve consists of a chambered body containing a spool and series of check valves to direct hydraulic oil flow. Should the valve malfunction, the components may be removed for inspection as follows:

1. Remove valve block assembly from planter.
2. Remove detent assembly and port adapter assemblies from rear of valve block.
3. Remove plug from both sides of valve block and remove spool.
4. Inspect all parts for pitting, contamination or foreign material. Also check seating surfaces inside the valve. Replace any parts found to be defective.
5. Lubricate spool with a light oil and reinstall. Check to be sure spool moves freely in valve body.

Important: Make sure the correct check ball(s) and spring are installed in each valve bore before reassembly.

HYDRAULIC MARKER SYSTEM– Single Valve

With the single valve marker system, both markers can be used at the same time by first lowering the marker and moving the hydraulic control lever to the raise position and immediately returning it to the lower position. This will shift the marker control valve spool and the remaining marker will be lowered. This is useful in planting contours and terraces.

An additional control is required for the optional lift assist package unless it is tied into the tractor 3-point lift system. Check with you tractor dealer for parts required.

WARNING Always stand clear of marker assemblies and blades when planter is operating.

WARNING Always position lockups in "Safety" position when transporting or storing planter.

DANGER If a marker or wing lift cylinder has been removed for any reason, do not attach the rod end of the cylinder until the cylinder is cycled several times to remove any air that may be trapped in the system.


DANGER Serious injury or death can result from contact with electric lines. Use care to avoid contact with electric lines when moving or operating this machine.

ROW MARKERS

7" x 7" Toolbar Frame

HYDRAULIC MARKER SYSTEM -Single Valve

ASSEMBLY

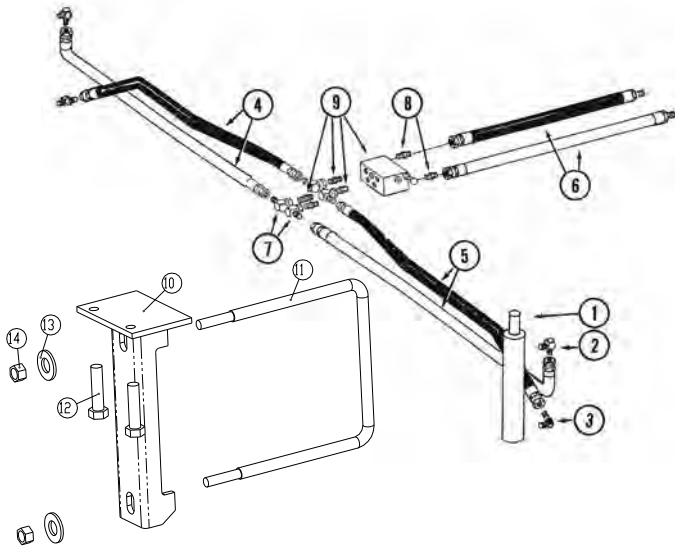

ITEM	PART No.	DESCRIPTION
1		See marker asm
2	TA6801-6-8 or TA6801-8-8	Elbow fitting
3	TA6801-6-8 or TA6801-8-8	Hydraulic fitting
4	11459.S	3/8" Hydraulic hose asm
5	11459.S	3/8" Hydraulic hose asm
6	11459.S	3/8" Hydraulic hose asm
7	TA2701-8-8	Hydraulic fitting
8	TA6400-6-8	Hydraulic fitting
9	KA5552	Sequence valve
10	4853	Mounting bracket
11	4647.SS	3/8 U-Bolt
12	H-3100	Hex bolt 3/8-16 x 1
13	W-2410	3/8 Washer
14	N-2101	Nylock 3/8-16

TROUBLESHOOTING

If both markers are lowering, but only one is raising at a time

- The hoses from the cylinders to the valve may be connected backwards. Check the hose diagram in manual to correct.

If the same marker is always operating.

- The spool in sequencing valve may not be shifting. Remove spool and inspect for foreign material to make sure all ports in the spool are open. Clean spool and reinstall.

If both markers lower and raise at the same time

- There may be foreign material under the check ball in the sequencing valve. Remove and clean the hose fitting, spring and balls. Remove and clean the spool as well.
- Make sure there is not a ball missing or incorrectly installed in the sequencing valve. Disassemble and correct if this is the case.

Increase hydraulic flow, spool may not be shifting.

If the marker is setting down while in the raised position,

- The O-ring in the marker cylinder may be damaged or the piston may be cracked. Disassemble the cylinder to inspect for damage, repair any damage.
- The spool in sequencing valve may not be shifting completely because of a detent ball or because the spring is missing. Check the valve assembly and install parts as needed.
- The spool in sequencing valve may be shifting back towards the center position. Restrict the flow of hydraulic oil from the tractor to the sequencing valve.

If neither marker will move

- The flow control may be closed too much. Loosen the locking nut and turn the flow control adjustment bolt out, or counterclockwise, until the desired speed is set.

If the markers are moving too fast

- The flow control may be open too much. Loosen the locking nut and turn the flow control adjustment bolt in, or clockwise, until the desired speed is set.

If the marker operation speed is sporadically changing

- The needle may be sticking open in the flow control valve. Remove the flow control, inspect and repair or replace.


ROW MARKERS

Marker Spindle / Hub / Blade

The marker blade is installed so the concave side of the blade is outward to throw dirt away from the grease seals. The spindle bracket is slotted so the hub and blade can be angled to throw more or less dirt. To adjust the hub and spindle, loosen the hardware and move the bracket as required. Tighten the bolts to the specified torque.

IMPORTANT: A marker blade assembly that is set at a sharper angle than necessary will add unnecessary stress to the complete marker assembly and shorten the life of bearings and blades. Set the blade angle only as needed to leave a clear mark.

A field test is recommended to ensure the markers are properly adjusted. After the field test is made, make any minor adjustments necessary.

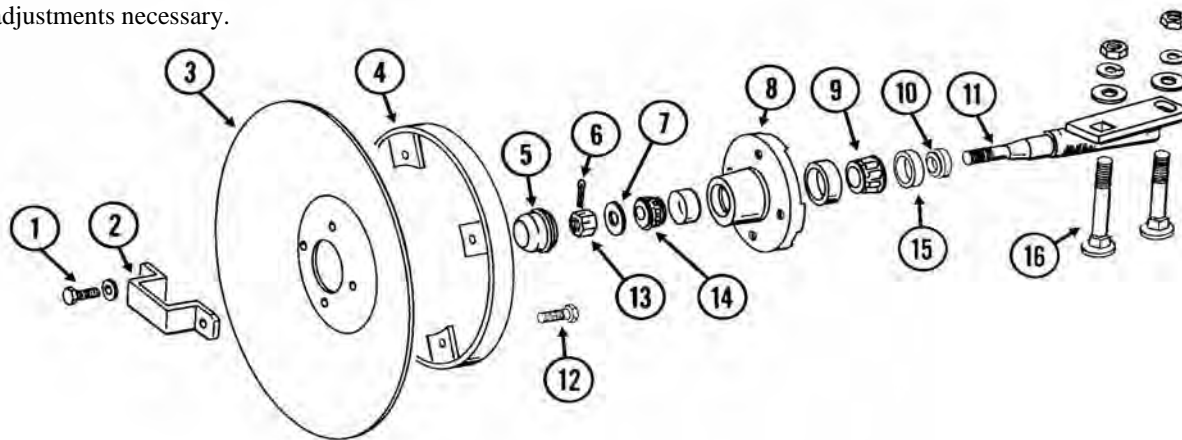

ITEM	PART No.	DESCRIPTION
1	K10722	Hex head cap screw, 1/2" -20x 1"
	W-5610	Lock washer, 1/2"
2	KD2597	Retainer
3	KD0746	Solid blade, 16" (shown)
	KD10283	Notched blade, 16" (Optional)
4	KA5853	Depth band
5	KD0840	Dust cap
6	K10544	Cotter pin, 5/32" x 1"
7	W-5410	Washer, 5/8" SAE
8	KA0167	Hub with cups
	KR0151	Outer cup
	KR0150	Inner cup
9	KA0245	Inner bearing
10	KA0899	Rubber seal
11	KA1676	Spindle, righthand
	KA1677	Spindle, lefthand
12	H-2100	Hex head cap screw, 5/16" -18x 1"
	K10109	Lock nut, 5/16"-18, grade 8
13	K10725	Hex slotted nut, 5/8" -18
14	KA0257	Outer bearing


15	KA0243	Grease seal
16	K10844	Carriage bolt, 1/2" -13x 3 1/2"
	K10168	Machine bushing, 1/2", 7 gauge
	W-4610	Lock washer, 1/2"
	N-4000	Hex nut, 1/2" -13
A.	KA1678	Hub and spindle assy, RH
	KA1679	Hub and spindle assy, LH
(Items 1, 2, 5-11, and 13-15)		

ROW MARKERS


7" x 7" Single Fold Row Marker

ASSEMBLY

ITEM	PART No.	DESCRIPTION
1	KD0453-02	Extension tube 4R30
	KD0453-07	Extension tube 4RW/6R30
2	KD2721	U bolt, 2" x 2"x 1/2 -13
	K10228	Lock washer, 1/2"
	K10102	Hex nut, 1/2" -13
3	KA5175	Arm 4R30
	KA5184	Arm 4RW
	KA5183	Arm 6R30
	K10640	Grease fitting, 1/4" -28
4	KD0462	Safety lockup pin
	K10670	Hair pin clip, No. 3
	K10187	Spring pin, 5/32" x 2"
5	KA5177	Mount 4R30
	KA5178	Mount 6R30
	K10640	Grease fitting, 1/4" -28
6	KD0438	Pin, 13 1/2"
	K10460	Cotter pin 1/4x2"
7	K10133	Hex head cap screw, 5/16" -18x 1 1/2"
	K10109	Lock nut, 5/16" -18
8	KD5892	Hose clamp, 5/8" x 1 1/2" x 1 1/2"
9	K10008	Hex head cap screw, 5/8" -11x 2"
	K10230	Lock washer 5/8
10	KA8919	Cylinder
11	KR0367	Pin, 2 7/8"
	KR0193	Clip
12	KR0375	Pin, 3 1/2"
	KR0193	Clip

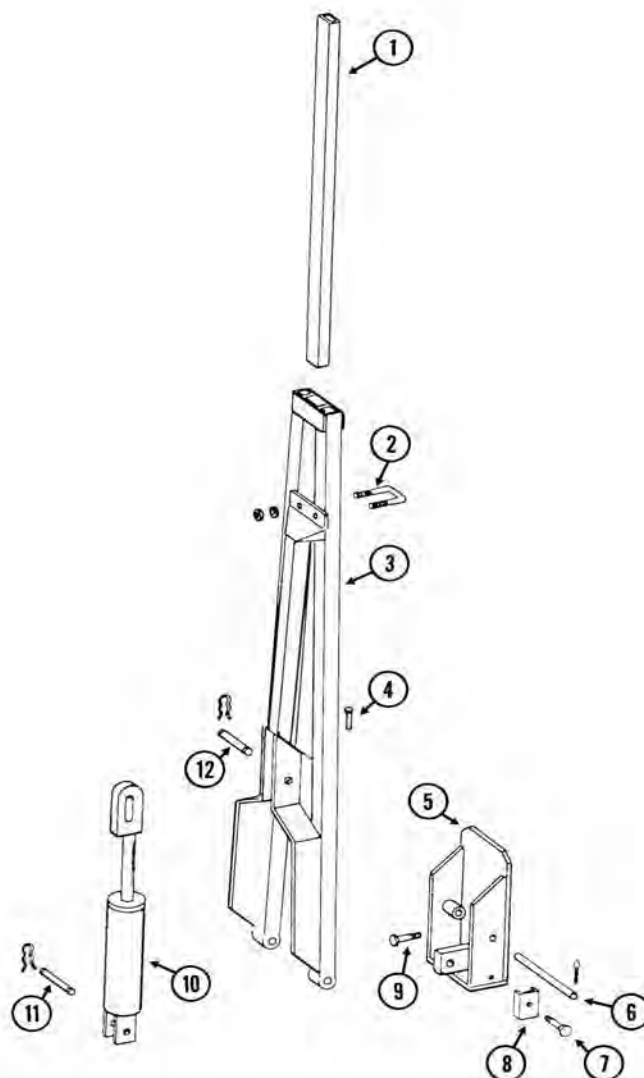

SINGLE FOLD MARKER CYLINDER

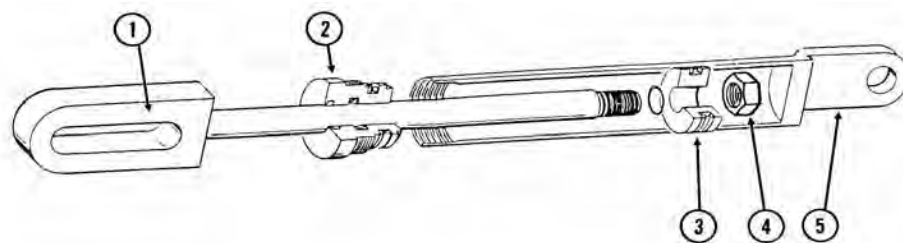


ITEM	PART No.	DESCRIPTION
	KA8919	Cylinder complete, 2" x 8"
1	KA8918	Rod assembly
2	KD12510	Gland
3	KD12511	Piston
4	K10967	Lock nut, 3/4" -16
	KR1529	Seal kit, includes 1 T seal, 2 O-rings, 1 BU ring, 1 U cup, 1 wiper

ROW MARKERS


7" x 7" Two Fold Row Marker

ITEM	PART No.	DESCRIPTION
1	KD0453-03	Extension tube 6RW/8R30
2	K10226	Washer, 1 1/4" SAE
3	KA5173	First stage arm w/ grease fittings
	K10641	Grease fitting, 1/8" NPT
4	KA9443	Cylinder
5	KD15386	Pin, 1 1/4" x 7 5/8"
	K10460	Cotter pin, 1/4"x 2"
6	KD5875	Hose clamp
7	K10133	Hex head cap screw, 5/16" -18x 1 1/2"
	K10109	Lock nut, 5/16" -18
8	KD0652	Pin, 1 1/4" x 9 1/2"
	K10460	Cotter pin, 1/4"x 2"
9	K10879	Flanged 12 point bolt 5/8" -11x2
10	KA5130	Mount
11	KD3214	Pin, 1 1/4" x 12 1/4"
	K10460	Cotter pin, 1/4"x 2"
12	KD2161	Pin, 1 1/4" x 8 1/4"
	K10460	Cotter pin, 1/4"x 2"
13	KD2721	U bolt, 2"x 2"x 1/2" -13
	K10228	Lock washer, 1/2"
	K10102	Hex nut, 1/2" -13
14	KA5190	Second stage arm 6R36/38
	KA5188	Second stage arm 8R30
15	KD0752-41	Sleeve 1" (if applicable)

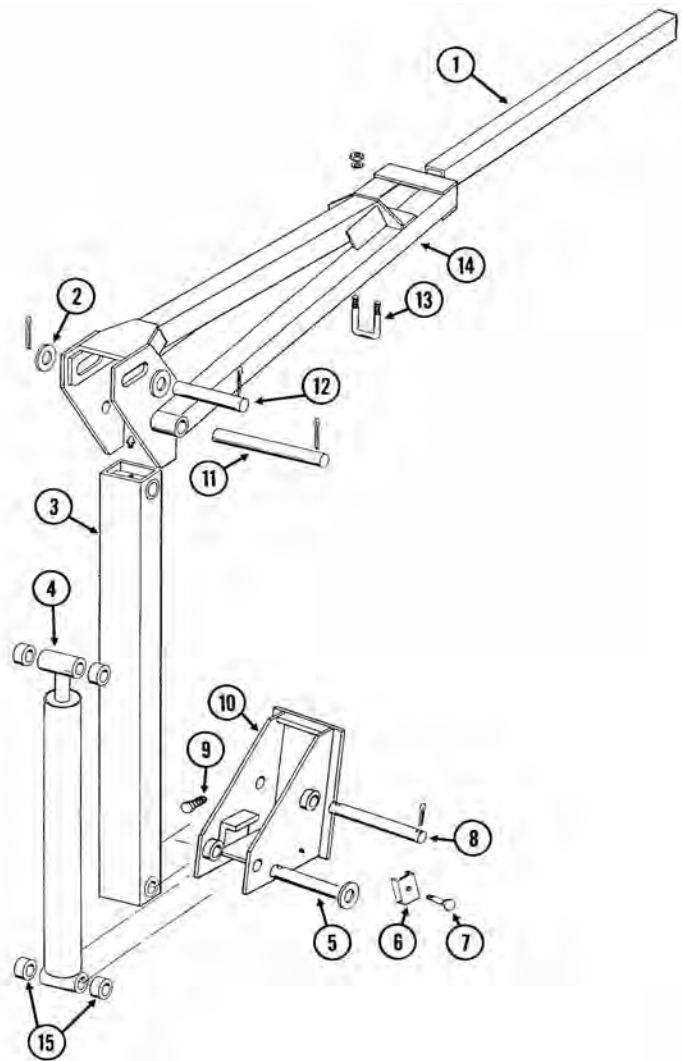

TWO FOLD MARKER CYLINDER

3/4" - 16 O-Ring Ports

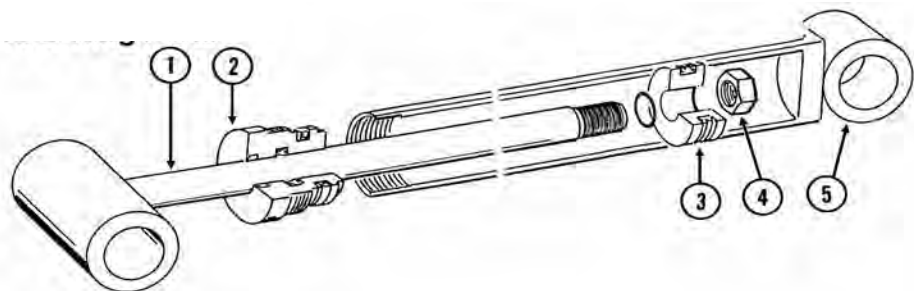

ITEM	PART No.	DESCRIPTION
	KA9443	Cylinder complete, 2" x 20 1/16"
	KA9440	Rod assembly
	KD12510	Gland
3	KD12511	Piston
4	K10967	Lock nut, 3/4" -16
	KR1529	Seal kit, includes 1 T seal, 2 O-rings, 1 BU ring, 1 U cup, 1 wiper

US INSECTICIDE SYSTEM

GRANULAR APPLICATION RATES

The US Insecticide System is mounted to the planter unit and has a hand clutch to engage or disengage the metering mechanism for easy removal of the hopper. Be sure no foreign objects get into the hopper when it is being filled with product. Keep hopper lids on when not being filled to prevent accumulation of dirt or moisture in the hoppers.

Many things can affect the rate of delivery of granular chemicals such as temperature, humidity, speed, ground conditions, flow ability of different materials or any obstruction in the meter.

NOTE: Since the chemical meter is driven directly from the seed meter box, changing the seed population after calibrating will change the output of the chemical meter, even if ground speed remains constant.



WARNING! Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals and soil. Handle with care and follow directions supplied by the chemical manufacturer.

A field check is important to determine the correct application rates. The following method for calibrating is recommended:

1. Attach a plastic bag to each chemical meter outlet tube.

2. Lower the planter and drive 500 feet at the desired seeding population and speed.
3. Weigh (in ounces) the amount of chemical in one bag.
4. Multiply the number of ounces by the factor shown below for your row width.

Row Width	Factor
38"	1.7
36"	1.8
30"	2.2
22"	3


Example: You have driven 500 feet. Your row spacing is 30" and you have collected 4.5 ounces of material in a plastic bag. Multiply 4.5 by the factor 2.2. This would indicate that you are applying 9.9 lbs./acre.

If you do not have the desired amount of chemical per acre, adjust the metering gate accordingly. Zero for minimum output while 45 for maximum output. It is suggested that after a desired rate is achieved through calibration, you record the ground speed and transmission setting used for the calibration along with the chemical used for future reference.

NOTE: It is important to check calibration of all rows.

ATTENTION: Once you have the proper setting do not vary your planting speed as this will affect the output.

SPREADER TUBE ASSEMBLY

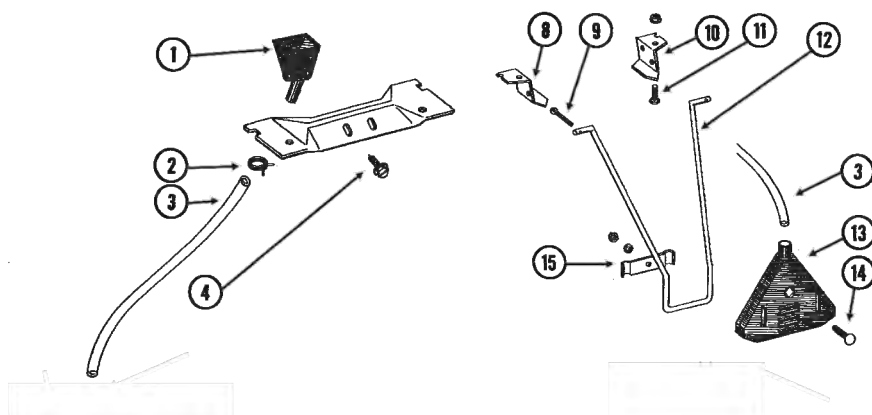

ITEM	PART No.	DESCRIPTION
1	KD2423	Funnel
2	K10680	Hose clamp
3	KD2947	Hose, precut, 7/16" x 28"
4	K10523	Self-tapping screw, 10 -24 x 1/2"
8	KD1115L	Hanger bracket, LH
9	K10452	Cotter pin, 1/8"x 1/2"
10	KD1115R	Hanger bracket, RH
11	K10310	Carriage bolt, 1/4" x 3/4"
	K10227	Lock washer, 1/4"
	K10103	Nut, 1/4"
12	KD8756	Hanger, standard length
13	KA2075	Diffuser, 14" band
14	K10306	Carriage bolt, 3/8" x 2"
	K10229	Lock washer, 3/8"
	K10101	Nut, 3/8"
15	KD118	Clamp plate

STANDARD MICROSEM SYSTEM

The microsem system meters microgranular products such as insecticide and herbicide with precision. The system is ground driven and has a positive displacement. The output is set by means of a transmission that is unaffected by a change in planting speed. The microsem system is mounted to the toolbar frame with support brackets to reduce weight on the planter unit. The microsem system with auger is equipped with a telescoping outlet, and its output starts from a minimum of 2-3 lbs/acre.

Each microsem hopper has a 33 lb. capacity and can be used with a double outlet for two row units or with a single outlet for one row unit.

The drive sprocket is mounted on the upper hex shaft. The hoses direct the granular product directly between the disc openers via drop tubes, or behind the disc openers via a spreader tube.

TROUBLE SHOOTING

PROBLEM:

Variations between the outlets or metering boxes.

POSSIBLE CAUSE:

- There may be foreign material mixed with the product
- **ATTENTION** there may be moisture in the product.
- The metering unit may have been assembled improperly.
- The outlet chute may be warped.
- The hose may be too long or bent, causing the hose to clog.


INSECTICIDE DROP TUBE

7085.DA Mounts on the right hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube points straight up.



7085.GA Mounts on the left hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube points straight up.


7085.SS

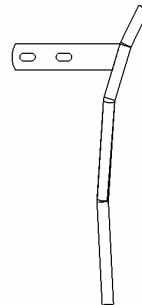

Mounts on the left hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube curves towards the rear to accept the feeder hose from the Air Insecticide System.

SETTING THE OUTPUT

The output is a function of the number of rotations of the spindle of the metering boxes, which is set primarily with the double sprocket (1) and the interchangeable sprockets (2). The chart provided will assist with the setting and also indicates the sprockets to be used for the principle commercial products. The furnished information is a recommendation only.

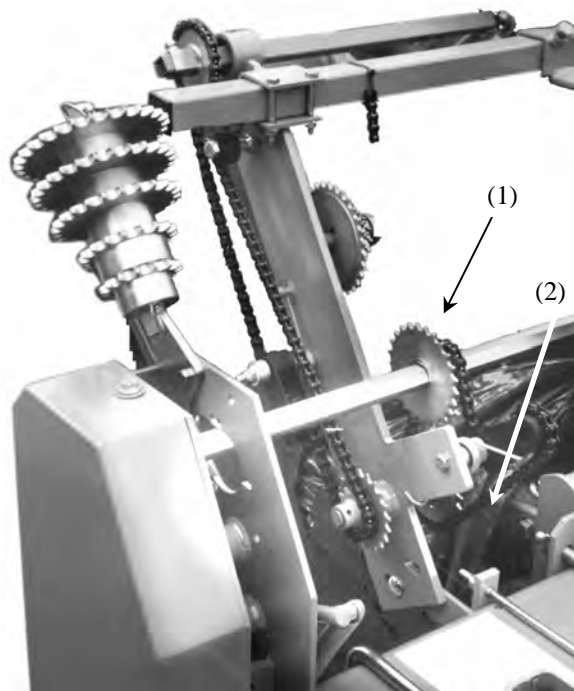

NOTE: Avoid moisture contamination. Moisture in the product will cause hardening and could cause chain breakage. To avoid this problem, empty hoppers and store in a dry place.

NOTE: This unit should be used only with microgranulars and not with powders or granulates. It is possible to meter large granulars provided the inside auger is changed for a special one.

⚠ WARNING Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals and soil. Handle with care and follow instructions of the chemical manufacturer.

HOW TO TEST FOR INSECTICIDE RATES

Measure out a distance of 328 feet (100m).

Set the sprocket combination to: A=12, B=30, C=12. (This ratio = 0.24 or the number of Microsem shaft rotations for 1 drive wheel rotation.)

Remove the hoses from a 2 outlet hopper, placing a bag or other container to catch the product. Put the product into the Microsem hopper. Engage the Microsem and drive forward the pre-measured distance. Weigh the amount of product caught in the container and convert to grams.

Ounces x 31.103481 = grams
 Inches x 2.54 = cm

Use the following formula:

$$\text{Output} = \frac{10 \times \text{quantity weighted (g)}}{\text{Inter-rows (cm)} \times 2}$$

Example:

Inter-rows = 60 cm (23.63")
 Quantity weighed = 60 grams (1.929 oz)

If you require 8 kg/ha or 8 lb/acre, choose the ratio
 $\frac{8}{5} \times 0.24 = 0.384$
 A=12, B=18, C=12

If you require 11 kg/ha or 11 lb/acre, choose the ratio
 $\frac{11}{5} \times 0.24 = 0.528$
 A=12, B=22, C=20

$$\text{Output} = \frac{10 \times 60}{60 \times 2} = 5 \text{ kg/ha or } 5 \text{ lb/acre}$$

From the following chart, find the closest sprocket combination to achieve appropriate lbs/acre.

Note: Because of the large variety of insecticides and its density and irregularity of granulars, it is impossible to provide an exact chart. This is a close approximation only.

Possible Sprocket Combinations			Ratios Obtained	
A	B	C		
12	35	12	-----	0.21
12	32	12	-----	0.22
12	30	12	-----	0.24
12	25	12	-----	0.29
12	22	12	-----	0.33
12	20	12	-----	0.36
12	18	12	-----	0.40
12	16	12	-----	0.45
12	15	12	-----	0.48 or
12	25	20	-----	0.48
12	23	20	-----	0.51
12	22	20	-----	0.54
12	21	20	-----	0.57
12	12	12	-----	0.60
12	24	12	-----	0.63
12	18	21	-----	0.66
25	22	12	-----	0.68
12	10	12	-----	0.72
25	20	12	-----	0.75
12	15	20	-----	0.80
25	18	12	-----	0.83
25	16	12	-----	0.94
25	15	12	-----	1 or
12	12	20	-----	1
25	22	20	-----	1.13
12	10	20	-----	1.20
25	12	12	-----	1.25
25	18	20	-----	1.40
25	10	12	-----	1.50
25	15	20	-----	1.66
25	12	20	-----	2.08
25	10	20	-----	2.50

Less Product



Note: The bold sprocket numbers for the interchangeable B sprocket are standard.

The remaining sprockets for the interchangeable B sprocket are available on request.
(13-14-16-23-26-35)




More Product

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

MICROSEM SETTING CHART - Drive sprockets to be used

These settings are theoretical and approximate. Actual output may vary. Other outputs can be obtained by using different sprocket arrangements of the Microsem drive, however travel speed variations will not affect the output.

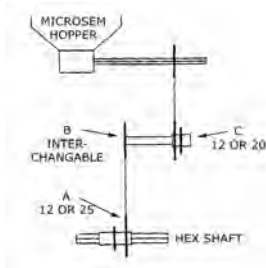

- A** = Double sprocket on hex shaft - driven 1
- B** = Interchangeable sprocket - driven 2
- C** = 12 or 20 tooth sprocket

	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C
#'s per acre	5.35	6.42	7.22	8.03	9.82	11.15		
THIMET	22" 12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 12 / 12	12 / 15 / 20	25 / 18 / 12		
20G	30" 12 / 22 / 20	12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20		
	36" 12 / 18 / 20	12 / 15 / 20	25 / 16 / 12	25 / 15 / 12	25 / 12 / 12			
	40" 25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20				
#'s per acre	5.00	6.50	8.10	9.30	10.00	11.40	13.50	
DASANIT	22"	12 / 12 / 12	25 / 22 / 12	12 / 15 / 20	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20	
15G	30" 12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20		
	36" 25 / 22 / 12	25 / 16 / 12	25 / 22 / 20	25 / 12 / 12	25 / 18 / 20	25 / 15 / 20		
	40" 25 / 20 / 12	25 / 15 / 12	25 / 12 / 12	25 / 18 / 20	25 / 15 / 20	25 / 14 / 20		
#'s per acre	5.85	6.50	7.20	8.70	9.70	10.80	12.30	14.50
FURADAN	22"	12 / 25 / 12	12 / 22 / 12	12 / 20 / 12	12 / 18 / 12	12 / 22 / 12	12 / 15 / 12	12 / 12 / 12
15G	30" 12 / 22 / 12	12 / 20 / 12	12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 12 / 12	25 / 22 / 12	12 / 15 / 20
	36" 12 / 18 / 12	12 / 16 / 12	12 / 15 / 12	12 / 12 / 12	12 / 18 / 20	25 / 22 / 12	12 / 15 / 20	25 / 15 / 12
	40" 12 / 16 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	25 / 22 / 12	12 / 15 / 12	25 / 15 / 12	
#'s per acre	5.40	7.13	8.91	10.70	12.50	14.25	16.04	
COUNTER 15G	22" 12 / 18 / 12	12 / 22 / 20	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20	25 / 12 / 12	
LORSBAN 15G	30" 12 / 22 / 20	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20	25 / 16 / 20	25 / 15 / 20	
	36" 12 / 18 / 20	25 / 16 / 12	25 / 22 / 20	25 / 18 / 20	25 / 15 / 20	25 / 14 / 20	25 / 12 / 20	
	40" 12 / 15 / 20	25 / 15 / 12	25 / 12 / 12	25 / 15 / 20	25 / 14 / 20	25 / 12 / 20		
#'s per acre	17.82	19.60	21.40	23.20				
COUNTER 15G	22" 25 / 18 / 20	25 / 16 / 20	25 / 15 / 20	25 / 14 / 20				
LORSBAN 15G	30" 25 / 14 / 20	25 / 12 / 20						

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

MICROSEM SETTING CHART - Drive sprockets to be used

These settings are theoretical and approximate. Actual output may vary. Other outputs can be obtained by using different sprocket arrangements of the Microsem drive, however travel speed variations will not affect the output.

	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C
#'s per acre	3.56	8.90	10.95	13.35	17.80	22.25	26.70	
TEMIK 15G 22"		12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	
GYPSUM 30"		12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 12 / 12	25 / 18 / 20	25 / 15 / 20	
36"		12 / 18 / 20	12 / 15 / 20	25 / 12 / 12	25 / 20 / 20	25 / 15 / 20	25 / 12 / 20	
40"	12 / 25 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 18 / 20	25 / 12 / 20	25 / 12 / 20	

#'s per acre	1.78	4.45	8.90					
TEMIK 15 G 22"		12 / 15 / 12	25 / 12 / 12					
CORNCOB 30"	12 / 25 / 12	25 / 22 / 12	25 / 18 / 20					
GRIT 36"	12 / 22 / 12	12 / 15 / 20	25 / 15 / 20					
40"	12 / 18 / 12	25 / 15 / 12	25 / 12 / 20					

#'s per acre	2.70	3.20	3.70	4.50	5.60	6.70	7.80	9.40
ZENECA 22"	12 / 25 / 12	12 / 22 / 12	12 / 18 / 12	12 / 15 / 12	12 / 12 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12
FORCE 30"	12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	25 / 22 / 12	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20
3G 36"	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20	25 / 15 / 20
38"	12 / 23 / 20	12 / 12 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 12 / 12	25 / 10 / 12	


#'s per acre	3.40	4.00	4.60	4.90	5.50	6.70	8.10	10.10
RIDOMIL 22"	12 / 22 / 12	12 / 18 / 12	12 / 16 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12
GOLD GR 30"	12 / 16 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 22 / 12	25 / 18 / 20
PC11G 36"	12 / 22 / 20	25 / 24 / 12	12 / 18 / 20	12 / 15 / 20	25 / 18 / 12	25 / 22 / 20	25 / 12 / 12	25 / 15 / 20
38"	12 / 21 / 20	25 / 22 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20	

#'s per acre	3.10	3.50	4.20	5.10	5.70	7.00	8.50	10.60
GOLD PC 22"	12 / 25 / 12	12 / 22 / 12	12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12
30"	12 / 18 / 12	12 / 16 / 12	12 / 22 / 20	12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 22 / 20	25 / 20 / 12
36"	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 18 / 12	25 / 22 / 20	25 / 12 / 12	12 / 12 / 12
38"	12 / 23 / 20	12 / 21 / 20	25 / 22 / 12	25 / 18 / 12	25 / 16 / 12	25 / 22 / 20	25 / 18 / 20	

#'s per acre	13.50	16.00	20.00	22.40				
AMEBIN 22"	25 / 18 / 12	25 / 15 / 12	25 / 12 / 12	25 / 18 / 20				
30"	25 / 22 / 20	25 / 18 / 20	25 / 15 / 20					
36"	25 / 18 / 20	25 / 15 / 20	25 / 12 / 20					
40"	25 / 12 / 12	25 / 13 / 20						

MICROSEM INSECTICIDE ASSEMBLY

Microsem Assembly

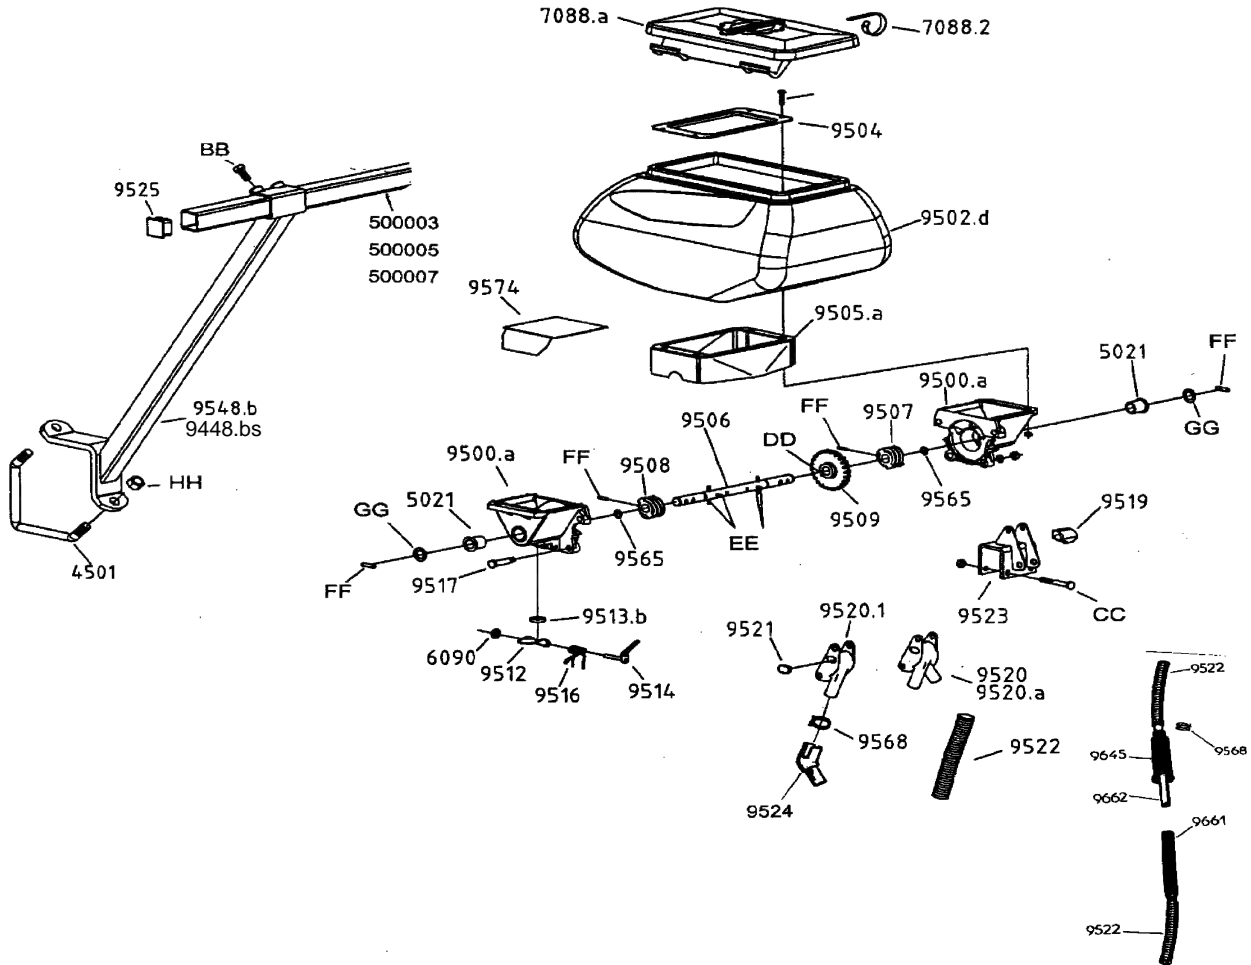

PART No. DESCRIPTION

4501	V-bolt, 16mm
5021	Self lubricated bushing
6090	Snapping, 6mm
7085.da	Drop tube, right hand
7085.ga	Drop tube, left hand
7088.a	Lid, hopper, with clip (7088.2)
7088.2	Clip, for hopper lid
9500.a	Housing(half), metering unit (replaces old 9500 & 9501 left & right sides)
9502.d	Plastic hopper only, 25 liter, -'03
9504	Steel base (hopper to meter)
9505.a	Rubber skirt
9506	4x35 roll pins)
9507	Worm gear, lft(reqrs 6x25 roll pin)
9508	Worm gear, rht(reqrs 6x25 roll pin)
9509	4x25 roll pin)
9512	Trap door (to clean out meter unit)
9513.a	Seal for trap door
9514	Lever for trap door
9516	Spring for trap door
9517	Bolt (fastens housings together)
9519	Rubber plug
9520	Two outlet chute (towards the front)
9520.a	Two outlet chute (towards the rear)

PART No. DESCRIPTION

9520.1	Single outlet
9521	Rubber plug for side of chute
9522	Hose (specify length)
9523	Clamp/mounting bracket
9524	Elbow for single outlet
9525	End cap for bar
9548.b	Support bar(for mounting to a 5x5 bar)
9548.bs	Support bar(for mounting to a 7x7 bar)
9565	Rubber O-ring
9568	Hose clamp (for 9522)
9574	Plate for hopper (to convert to single outlet)
9645	Protective Sleeve
9661	Female half of sliding drop tube assy
9662	Male half of sliding drop tube assy
500003	Carrier bar, 8' 2" long(1-1/2" square)
500005	Carrier bar, 11' 6" long(1-1/2" square)
500007	Carrier bar, 14' 9" long(1-1/2" square)
AA	10530096 - Phillips head bolt, 6 x 25
BB	HM-61225 - Hex bolt, 12 x 25
CC	HM-2860 - Hex bolt, 8 x 60
DD	10172041 - Roll pin, 4 x 25
EE	10172043 - Roll pin, 4 x 35
FF	10172090 - Roll pin, 6 x 25
GG	10622024 - Washer, 16 x 26 x 1
HH	NM-51605 - 16mm nylon locknut

LIQUID FERTILIZER

3-point Mounted Planters

PUMP MOUNTING AND HOSE ARRANGEMENT


The squeeze pump is shipped with the discharge manifold in the rearward or non-operating position. Before operating or mounting the pump, position the discharge manifold in the forward or operating position and secure by tightening the wing nuts.

The pump should always be mounted even with or lower than the fertilizer tank for accurate metering. The rate of liquid fertilizer application is determined by the combination of sprockets on the squeeze pump and the drive shafts (see chart). When changing the sprocket combinations, check that the sprockets are in alignment, that the sprocket retaining collars are tight and that the chain tension is restored.


The shut-off valves should be closed to shut off the flow when the pump is not in use, either overnight, or for an extended amount of time. Also close the valves when servicing either the pump or the hoses.

To prolong the life of the hoses, the discharge manifold must be repositioned to the rearward position when not in use to prevent hose distortion.

The discharge pump must be in the forward position when the pump is in operation. To reposition the manifold, loosen the wing nuts and slide the manifold forward and sideways or rearward as required and retighten the nuts.

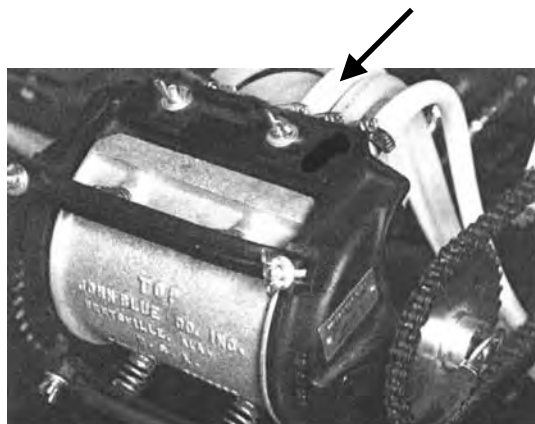

DISCHARGE MANIFOLD REARWARD

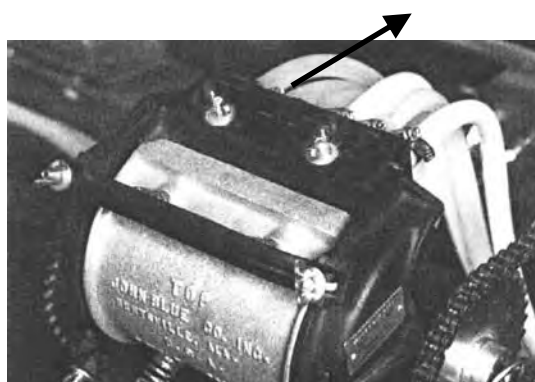

DISCHARGE MANIFOLD FORWARD



WARNING

Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals, and soil. Handle with care and follow instructions of the chemical manufacturer.



IMPORTANT

If the fertilizer is placed too close to the seed, it may cause germination or seedling damage especially if used in amounts in excess of the fertilizer manufacturer's recommendations. Check with your fertilizer dealer or manufacturer for the correct amount and placement of fertilizer.

LIQUID FERTILIZER

3-point Mounted Planters

DELIVERY RATE CHART

The following delivery rate chart provides an approximate application rate only. Actual delivery will vary with temperature and the type of fertilizer being used.

Chart is shown in gallons per acre. This chart is for a pump with a 1/2" hose. For settings with a 5/16" hose, cut gal/acre in half.

8 Tooth Driver Sprocket

Sprocket					
Part #	Driven	40"	38"	36"	30"
L-1383	8	21.9	23.1	23.9	29
L-1384	9	19.1	20.4	21.0	25.3
L-1385	10	17.2	18.3	18.9	22.7
L-1386	15	11.4	12.1	12.5	15.
L-1381	20	8.6	9.1	9.4	11.3
L-1387	22	7.7	8.2	8.5	10.2
L-1388	23	7.5	8.0	8.3	9.6
L-1389	26	6.7	7.1	7.3	8.8
L-1390	30	5.8	6.2	6.4	7.7
L-1391	31	5.6	5.9	6.1	7.4
L-1392	32	5.5	5.8	6	7.3

Gallons per Acre

15 Tooth Driver Sprocket

L-1383	8	40.0	43.0	44.5	53.3
L-1384	9	35.9	38.2	39.5	47.4
L-1385	10	32.2	34.3	39.5	42.6
L-1386	15	21.5	22.9	23.6	28.4
L-1381	20	16.1	17.1	17.7	21.3
L-1387	22	14.6	15.6	16.1	19.3
L-1388	23	14.0	14.9	15.4	18.4
L-1389	26	12.5	13.3	13.7	16.5
L-1390	30	10.7	11.4	11.8	14.2
L-1391	31	10.3	11.0	11.3	13.6
L-1392	32	10.1	10.7	11.1	13.3

Gallons per Acre

OPTIONAL PISTON PUMP

If the machine is equipped with the piston pump option, the rate of liquid fertilizer application is determined by the piston pump settings.

To adjust delivery rate, loosen the 3/8" lock nut that secured the arm with the pointer and rotate the scale flange until the pointer is over the desired scale setting. The adjustment wrench will facilitate rotation of the scale flange. Tighten the 3/8" lock nut being careful not to over tighten.



CLEANING

The tanks and all hoses are made of sturdy plastic and rubber to resist corrosion. However, the tanks, hoses and metering pump should be thoroughly cleaned with water at the end of the planting season or prior to an extended period of non-use. Do not allow fertilizer to crystallize due to cold temperature or evaporation.

On machines equipped with the piston pump, the strainer located between the piston pump and ball valve should be taken apart and cleaned daily. Remove the end cap to clean the screen

PISTON PUMP STORAGE

KEEP AIR OUT OF THE PUMP! This is the only way to prevent corrosion. Even for short periods of storage, the entrance of air into the pump will cause **RAPID AND SEVERE CORROSION.**

Overnight Storage

Suspension Fertilizer must be flushed from the pump for ANY storage period.

Winter Storage

1. Flush pump thoroughly with 5 to 10 gallons of fresh water and circulate until all corrosive salts are dissolved in the pump.
2. With the pump set on 10, draw in a mixture of half diesel fuel and half 10 weight oil until the discharge is clean. Then plug inlet and outlet

LIQUID FERTILIZER

3-point Mounted Planters

PISTON PUMP APPLICATION RATES

Pump Setting	2	3	4	5	6	7	8	9	10
4-row 30"	13	19	26	32	38	45	51	58	64
4-row 36"	11	16	21	27	32	37	43	48	54
4-row 38"	10	15	20	26	30	35	41	46	51
6-row 30"	9	13	17	21	25	30	35	39	43
6-row 36"	7	11	14	18	21	25	29	32	36
6-row 38"	7	10	13	17	20	24	27	31	34
8-row 30"	7	10	13	16	19	23	26	29	32
8-row 36"	5	8	11	13.5	16	19	21.5	24	27
8-row 38"	5	7	10	13	15	18	20	23	25
12-row 30"	4	6.5	8.5	11	13	15	17	19.5	21
12-row 36"	4	5.5	7	9	11	12.5	14.5	16	18
12-row 38"	3	5	6.5	8.5	10	12	13.5	15	17

The above chart is for planters equipped with ground drive wheels that have 7.60 x 15 tires, 26 tooth drive sprocket, and a 22 tooth driven. This chart is based on average wheel slippage and liquid viscosities. This chart is also based on standard pump sprockets of 30 tooth drive and 16 tooth driven. Other sprockets are available.

Measure and weigh one gallon of actual fertilizer solution to determine exact application rates. This chart was calculated based on a solution weighing 10 pounds per gallon.

IMPORTANT: Fertilizer application rates can vary from the above chart. To prevent application miscalculation, make field checks to be sure you are applying fertilizer to all rows at the desired rate.

NOTE: Flow to all rows should be checked periodically. If one or more lines are plugged, the desired rate will be delivered to the remaining rows keeping total application rate at desired rate.

To check the exact number of gallons your fertilizer attachment will actually deliver on 30" row spacing, proceed as follows:

1. Remove the hose from one of the fertilizer openers and insert it into a collection container that has been secured to the planter frame.
2. Engage the fertilizer attachment and drive forward for 174'.
3. Measure the fluid ounces caught in the container and multiply that amount by 100.
4. Divide that amount by 128.
5. The result will be the gallons of fertilizer delivered per acre when planting in 30" rows. Rinse the collection container and repeat test on other rows if necessary. To convert this delivery rate for wider rows, multiply by the following conversion factors:


For 36" rows, multiply by .83 by result

For 38" rows, multiply by .79 by result

LIQUID FERTILIZER

3-point Mounted Planters

SQUEEZE PUMP ASSEMBLY

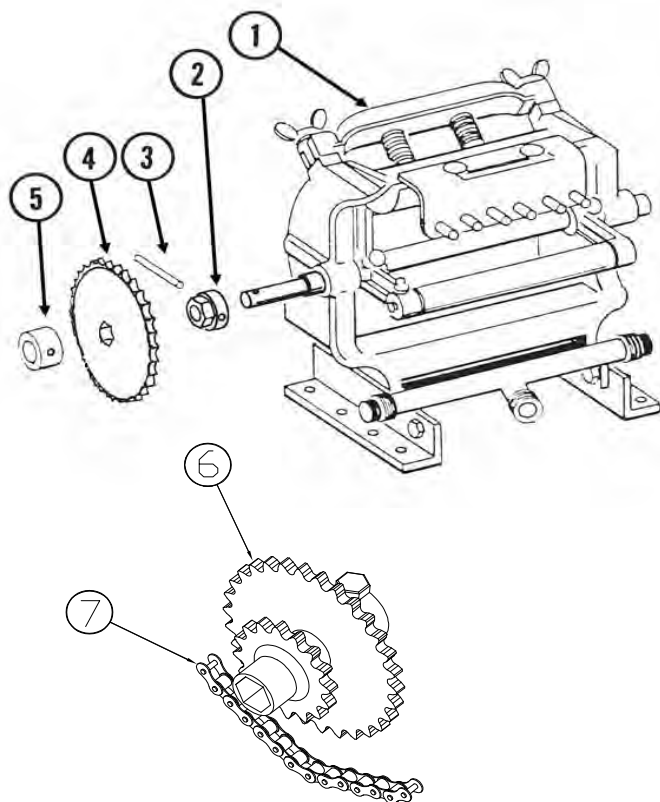

ITEM	PART No.	DESCRIPTION
1	JBL6C	SQUEEZE PUMP 2 - 6 ROWS
	JBL8LC	SQUEEZE PUMP 8 ROWS
	JBL12C	SQUEEZE PUMP 12 ROWS
2	MPL1414	7/8" SPROCKET ADAPTER
3	F64286	SPRING PIN 5/16 X 2-1/4"
4	MPL1381	SPROCKET, 20 TOOTH
	MPL1383	SPROCKET, 8 TOOTH
	MPL1384	SPROCKET, 9 TOOTH
	MPL1385	SPROCKET, 10 TOOTH
	MPL1386	SPROCKET, 15 TOOTH
	MPL1387	SPROCKET, 22 TOOTH
	MPL1388	SPROCKET, 23 TOOTH
	MPL1389	SPROCKET, 26 TOOTH
5	MPL4414	7/8" SPROCKET RETAINER
6	MPL3016	DOUBLE SPROCKET, 16-30T
7	MPL2040A	DRIVE CHAIN 4 FT.

TROUBLESHOOTING

PROBLEM: Pump hard or impossible to prime

POSSIBLE CAUSE	SOLUTION
Valves fouled or in wrong place.	Inspect and clean valves.
Air leak in suction line.	Repair leak.
Pump is set too low.	Adjust pump setting.
Packing washers are worn out.	Replace.

PROBLEM: Low metering.

POSSIBLE CAUSE	SOLUTION
Valves are fouled or in wrong place.	Inspect and clean valves.
Air leak in suction line.	Repair leak.
Pump is set too low.	Adjust pump setting.
Broken valve spring.	Replace spring.

PROBLEM: Over meters.

POSSIBLE CAUSE	SOLUTION
Broken discharge valve spring.	Replace spring.
Trash is under valves.	Inspect and clean valves.
Improper rate setting.	Adjust pump setting.

PROBLEM: Leaks through when stopped.

POSSIBLE CAUSE	SOLUTION
Broken discharge valve spring.	Replace spring.
Trash is under valves.	Inspect and clean valves.

PROBLEM: Fertilizer solution leaking under stuffing box.

POSSIBLE CAUSE	SOLUTION
Packing washers are worn out.	Replace.

PROBLEM: Pump is using excessive oil.

POSSIBLE CAUSE	SOLUTION
Oil seals or o-ring worn and leaking.	Replace.

PROBLEM: Pump operates noisily.

POSSIBLE CAUSE	SOLUTION
Crankcase components worn excessively.	Inspect and replace if necessary.